




Ø22紧急停止开关 / Ø22 Emergency Stop Switches

名称/外观 Product appearance	操作类别 Operation	触点 Contact	产品型号 Model	颜色 Color
Ø40mm大蘑菇头形/ Mushroom 	按锁定拉出 旋转复位 Push-lock Turn Reset	1NC	SD22-8101	 红色/Red
		2NC	SD22-8102	

*按钮按下后呈锁定状态，拉出或顺时针旋转复位。
When pressed, the button is locked in the depressed position, and is reset when either pulled or turned clockwise.

急停开关

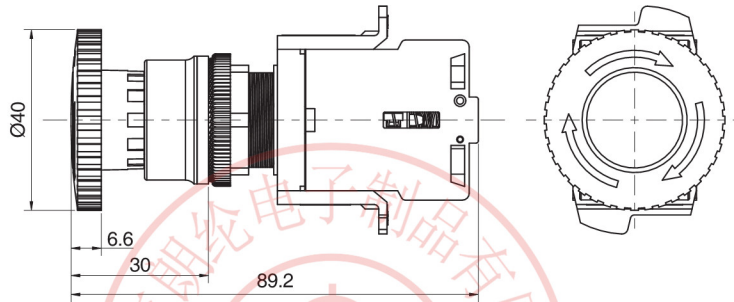

Ø22带灯紧急停止开关 / Ø22 Illuminated Emergency Stop Switches

名称/外观 Product appearance	操作类别 Operation	触点 Contact	产品型号 Model	颜色 Color	额定电压 Rated Voltage
Ø40mm大蘑菇头形/ Mushroom 	按锁定拉出 旋转复位 Push-lock Turn Reset	1NC	SD22-8701	 红色/Red	D:24VDC E:12VDC F:6.3VDC A1:110VAC A2:220VAC
		2NC	SD22-8702		

*按钮按下后呈锁定状态，拉出或顺时针旋转复位。
When pressed, the button is locked in the depressed position, and is reset when either pulled or turned clockwise.

带灯急停开关

